


Quick Start Guide

chirp


BY DIGIVAC

1 *Note: Always Pull off Chirp, **NEVER TWIST**

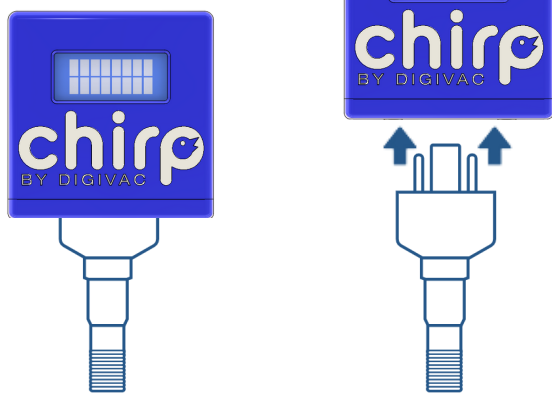


Unpack and remove Chirp display from gauge tube.

2

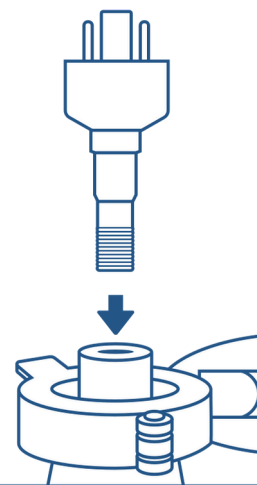


Plumb the vacuum gauge tube into your vacuum system

3

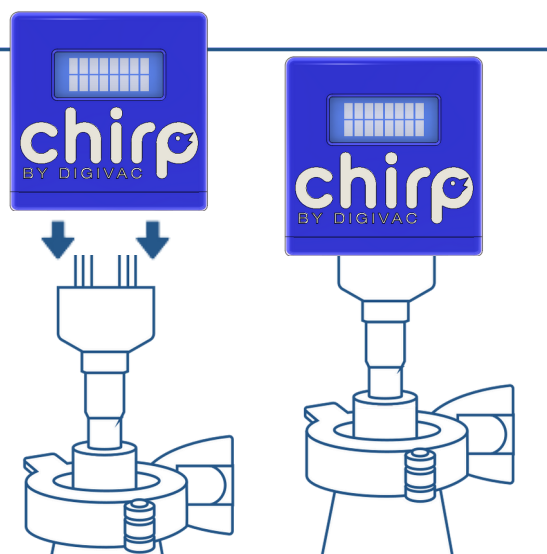

Connect the Chirp display to the vacuum tube

4

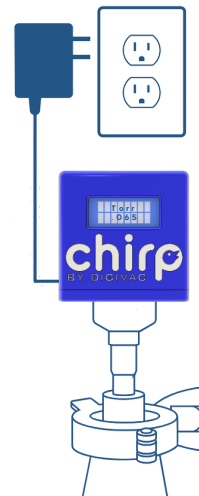

Run the AC adapter wire provided to the gauge, plugin to power on and read vacuum!