

Quick Start Guide


BULLSEYE PRECISION GAUGE

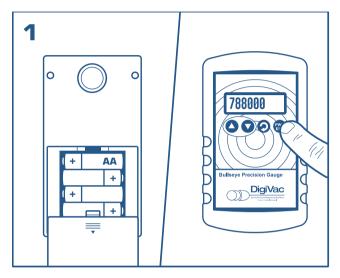


Install batteries, press power button and verify that the display lights up

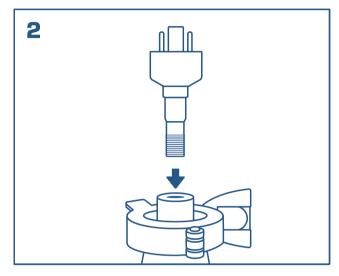

Plumb the thermocouple gauge in your vacuum system, making sure to orient the sensor vertically so the threads are down. This is for best accuracy and long term reliability.

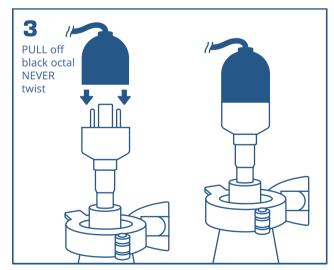

Connect the octal end of the sensor cable to the vacuum sensor

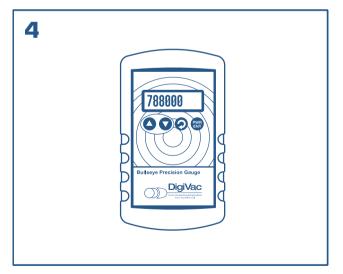

Verify that the readings make sense

