

Quick Start Guide

BULLSEYE PRECISION GAUGE

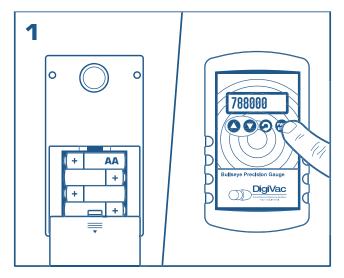


Install batteries or Connect to USB, press power button and verify that the display lights up


**NOTE: The USB is an additional option for external power, it won't charge the AAs.

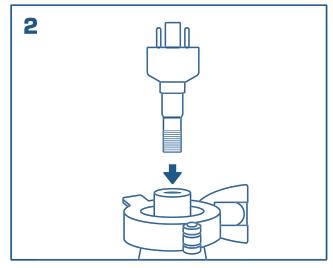

Plumb the thermocouple gauge in your vacuum system, making sure to orient the sensor vertically so the threads are down. This is for best accuracy and long term reliability.

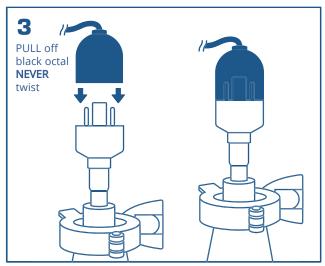

Connect the octal end of the sensor cable to the vacuum sensor

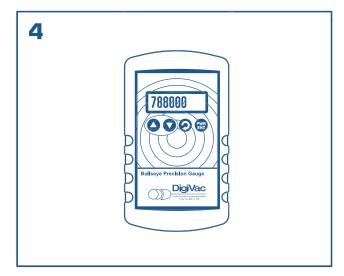

Verify that the readings make sense

