
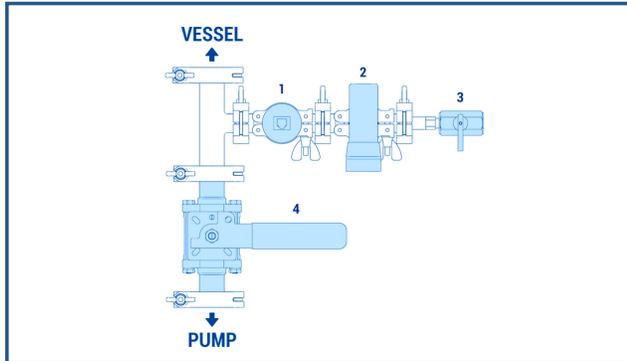



# Quick Start Guide

FYRA & DINAMO  
Quick Start | End of Drying


## System Preview

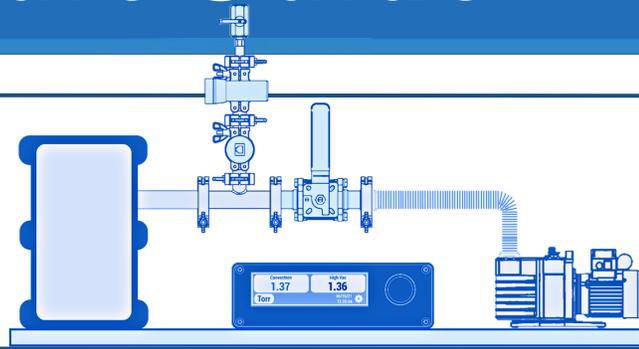


Configure the (1)DCP, (2)CONVECTRON, (3)VENT VALVE, and (4)ISOLATION VALVE between the VESSEL and PUMP as pictured

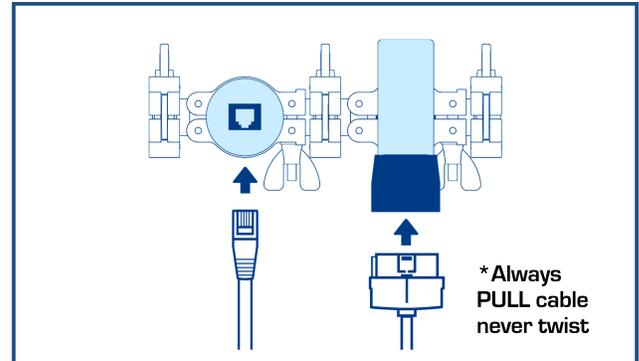


Connect cables to sensors

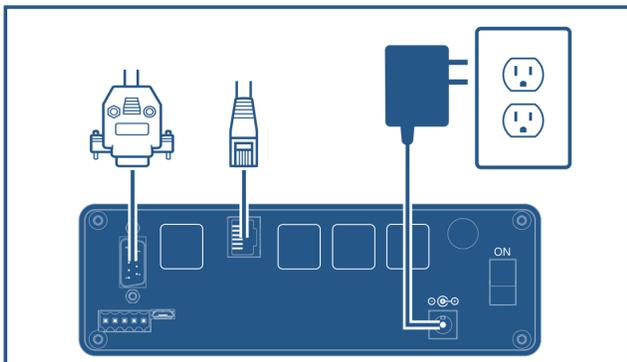


Connect cable to FYRA

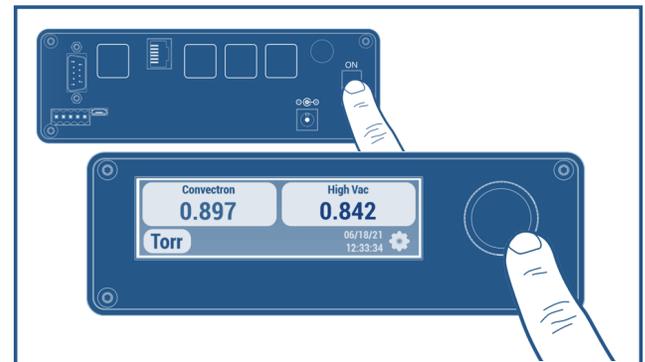


Turn on and DRY (Vac + Heat) until <1 Torr

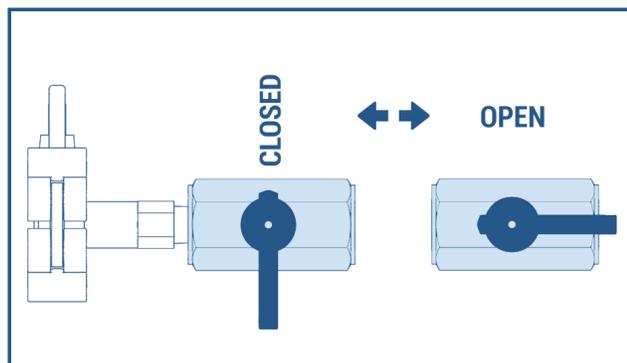

Flush the sensors by opening the VENT VALVE briefly and close

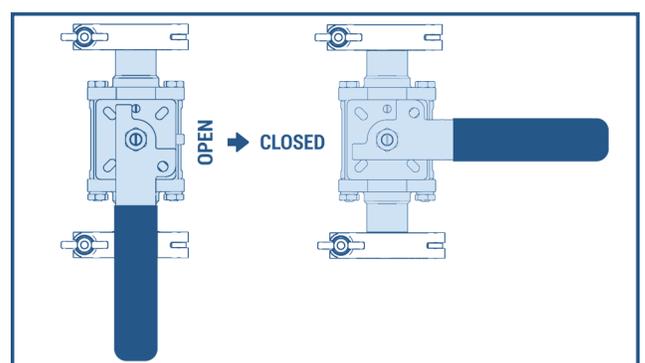


Isolate the vessel by closing the ISOLATION VALVE

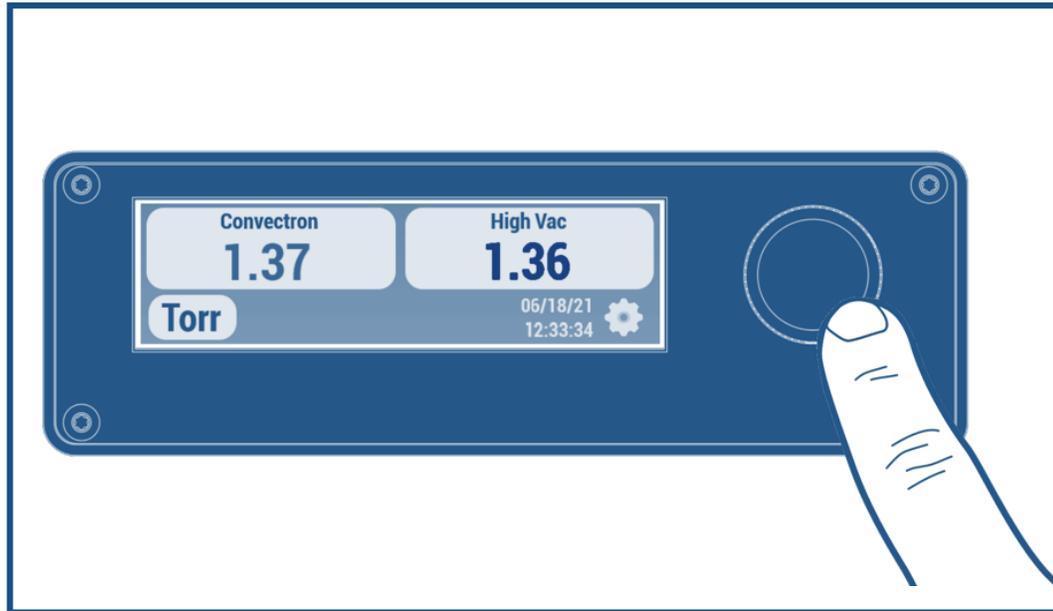

Read the Vacuum difference on the FYRA.

Large difference = Wet  
Small Difference = Dry

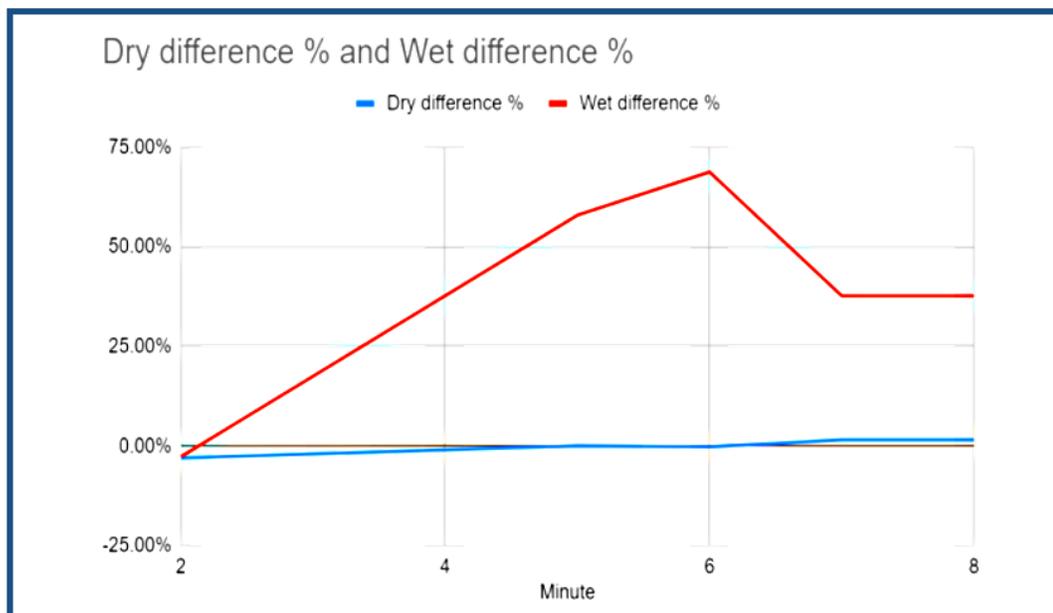

Graph