


## Automated High Vacuum Pump-down System with SNAP Vacuum Control

### How to Install the Door Handle/Latches:

There are 2 door latches on either side of the cart (Left and Right).

They are mirrors of each other.

1. Take notice of the square nuts in the framing.
2. Insert screws into the receiver part of the latch as shown (bottom middle image).
3. Line it up evenly with the framing so the door can open. If the screws and the nuts do not align, the nuts can slide freely along the framing to slide into position.
4. Tighten the screws to the nuts to secure the receiver side of the latch.
5. Same as before, insert the screws into the Handle part of the latch, lining up the screws in the framing.
6. Before tightening the screws, make sure the handle side lines up correctly with the receiving side.
7. Place the screw inserts to cover the screws.

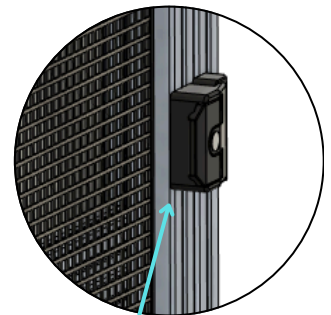

Latch Location



Square Nuts in Framing



Receiver(Left) Handle(Right)



Ex. Open Latch

